


# ANAHEIM

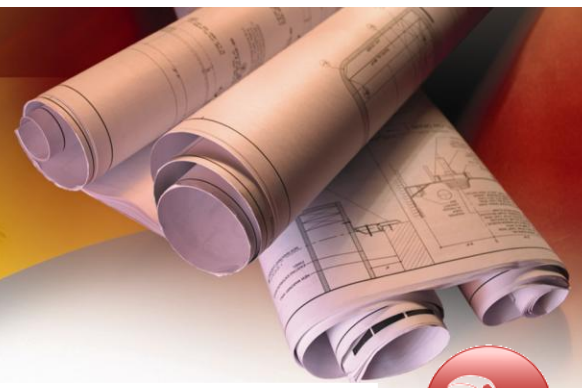

## BLOCKWALL, COLUMNS/PILASTERS CONSTRUCTION APPROVAL GUIDE

INSPECTION

During construction, a City inspector will visit your property to confirm the project is being built as indicated on the approved plans and confirm the final product is safe. This guide describes the construction phases when an inspection is needed and how to schedule an inspection. To schedule an inspection, call (714) 765-4626. The automated system will ask you to enter your Building Permit number and a code number for the type of inspection you are requesting. See the instructions below for the inspection codes. Inspection requests made before 5:00 p.m. will be scheduled for the following work day.

### Inspection 1: Footing Inspection

- Call for your first inspection when the footings are dug and the required steel reinforcement is placed and properly secured in the footing. The inspector will check the size and depth of the footings, and verify that the correct reinforcement is used.
  - Dial: (714)765-4626.
  - Press 1 for Inspection
  - Press 1 to schedule an inspection
  - Press 1 for Building Permit Inspection
  - Enter Permit Number 2-0-\_\_-\_\_-0-\_\_-\_\_-\_\_-\_\_
  - Enter Code Number 1-0-6.

### Inspection 2: Pre-grout Inspection

- Once your footings are approved and concrete poured, you may complete the placement of masonry blocks. Call for your second inspection once your wall is built to full height and your steel reinforcement is secured in place within the masonry blocks.
  - Dial: (714)765-4626.
  - Press 1 for Inspection
  - Press 1 to schedule an inspection
  - Press 1 for Building Permit Inspection
  - Enter Permit Number 2-0-\_\_-\_\_-0-\_\_-\_\_-\_\_-\_\_
  - Enter Code Number 1-0-8.

### Inspection 3: Final Inspection

- The final inspection will occur once all masonry blocks have been grouted, minimum 2 inch masonry or mortar cap has been placed and all construction debris has been removed from the job site.
  - Dial: (714)765-4626.
  - Press 1 for Inspection
  - Press 1 to schedule an inspection
  - Press 1 for Building Permit Inspection
  - Enter Permit Number 2-0-\_\_-\_\_-0-\_\_-\_\_-\_\_-\_\_
  - Enter Code Number 1-9-9.

### Helpful Tips

- To speak to your inspector and coordinate a timeframe for inspection, on the day of your inspection call (714) 765-5153 between 7:30 am, and 8:00 am, and press "0". You can also check your inspection timeline/status online at [www.anaheim.net/building](http://www.anaheim.net/building)
- Be sure that either you or your contractor is present for the inspection. If the work isn't ready for an inspection, you could be charged for a call-back inspection.